



## ELEVATION

### NOTE:

AN INDIVIDUAL PRESSURE REDUCING VALVE (PRV) IS OWNED AND MAINTAINED BY THE PROPERTY OWNER. THE DISTRICT REQUIRES THAT THE OWNER PROVIDE A PRV ANYTIME THAT THE WATER PRESSURE AT THE POINT OF SERVICE (I.E. RESIDENCE LOWER FLOOR) WOULD OTHERWISE EXCEED 80 PSI FROM THE DISTRICT'S LOCAL PRESSURE ZONE. FAILURE TO PROPERLY INSTALL AND PERIODICALLY TEST AND MAINTAIN THE PRV MAY LEAD TO PROPERTY DAMAGE THAT WILL BE THE SOLE RESPONSIBILITY OF THE PROPERTY OWNER. THE DISTRICT RECOMMENDS THAT INDIVIDUAL PRV'S BE ADJUSTED TO DELIVER BETWEEN 40 AND 60 PSI AT THE POINT OF SERVICE